

Micro Vibes

80s Vibes Mini Camera

User Instruction Manual

Welcome to your Micro Vibes 80s Vibes Mini Camera — a retro-inspired digital camera with bold 80s styling and modern digital performance.

Please read this guide carefully before using your device.

1. Camera Overview

Front

- MIC – Built-in microphone for video recording
- Lens – Captures photos and video
- Flash Bulb – Assists in low-light environments
- Leather Pattern Detail – Retro 80s design finish

Top

- Power Button / OK Button – Powers device on/off and confirms selections
- Reset Port – Used if the system becomes unresponsive

Rear

- Display – 1.44" LCD screen for framing and playback
- Indicator Light – Displays power and charging status

Side

- Up / Mode Key – Switches modes and navigates menus
- Lower / Filter Switch – Activates filters and navigation controls

Bottom

- Type-C Charging Port – Used for charging and file transfer
- TF Card Slot – Supports Micro SD storage cards

2. Powering On and Off

To Turn On:

Press and hold the Power Button for 3 seconds.

The device will power up automatically.

To Turn Off:

Press and hold the Power Button again for 3 seconds until the screen turns off.

In Photo or Video Mode:

Tap the Power Button to capture a photo or start recording.

3. Taking Photos

The camera enters Photo Mode by default when powered on.

To Capture a Photo:

1. Frame your subject using the display screen.
2. Tap the Power Button to take a photo.
3. Images save automatically to the TF card.

To Use Filters:

1. Press and hold the Lower / Filter button to activate flash on or off.
2. Tap the Lower button to enter Filter Mode.
3. Cycle through available retro filters using navigation keys.

4. Recording Video

To Switch to Video Mode:

1. Press the Up / Mode button while in Photo Mode.
2. The device will enter Video Mode.

To Record:

1. Tap the Power Button to begin recording.
2. Tap the Power Button again to stop.

Video is saved automatically to the TF card.

5. Playback Mode

To Enter Playback Mode:

1. Press the Up / Mode button until Playback Mode appears.

In Playback Mode:

- Use the Up and Down keys to navigate files.
- Press and hold the Power Button to return to default Photo Mode.
- Press and hold the Down button to trigger the delete prompt.

- Press the Power Button to confirm deletion.

6. Navigation Controls

In Playback Mode:

Use the Up and Down buttons to browse photos and videos stored on the TF card.

In Photo Mode:

Press the Up button to switch to Video Mode.

Press again to return to Photo Mode.

7. Time Setting Method

After inserting the TF card and powering on, the camera will automatically power off after approximately 5 seconds.

To set the time:

1. Connect the camera to a computer using a USB cable.
2. Select "Mass Storage Mode" if prompted.
3. Open the power button directory.
4. Navigate to the "DCIM" folder.
5. Locate the .xxx.bat file.
6. Double-click the file to synchronize the camera's time with your computer's current system time.

8. Charging the Device

Connect the Type-C cable to a 5V USB power source.

The indicator light will show charging status.

Charging time is approximately 1–2 hours.

Use only standard 5V chargers.

9. Technical Specifications

Screen: 1.44" LCD

Photo Mode: High-resolution JPG capture

Video Mode: HD recording

Storage: TF (Micro SD) Card
Charging Port: Type-C
Battery: Rechargeable Lithium
Operation: Up/Down Navigation Keys + Power/OK Button

10. Safety & Care

- Do not expose to excessive heat or moisture.
- Do not disassemble the device.
- Use only recommended charging cables.
- Avoid impact or dropping.
- Keep out of reach of small children.

Micro Vibes — Bold. Retro. Unapologetically 80s.

Micro Vibes

90s Vibes Mini Camera

User Instruction Manual

Welcome to your Micro Vibes 90s Vibes Mini Camera — a pocket-sized digital camera inspired by classic 90s design, built with modern digital performance. Please read this guide carefully before first use.

1. Camera Overview

Your camera features a simple and intuitive layout designed for quick, easy use.

Front

- Lens – Captures photos and video
- Flash Light – Assists in low-light environments
- Power / Shutter Button – Turns camera on/off and captures photos or starts/stops video

Top

- Mode Button (+) – Switches between Photo, Video, and Playback modes
- Filter Button (-) – Changes filters in Photo Mode

Rear

- 1.44" LCD Display – Viewfinder and playback screen
- USB Charging Port – Used for charging and data transfer
- TF (Micro SD) Card Slot – Storage expansion
- Reset Port – For system reset if required

2. Before First Use

Insert a Memory Card

The camera requires a TF (Micro SD) card to save photos and videos.

1. Ensure the camera is powered off.
2. Insert a Micro SD card into the TF card slot.
3. Gently push until it clicks into place.

For best performance, use a high-speed Micro SD card.

Charging the Camera

Your camera includes a built-in rechargeable lithium battery.

1. Connect the included USB cable to the camera.
2. Plug the other end into a 5V USB power source.
3. The indicator light will flash while charging.
4. When fully charged, the light will turn off.

Battery Capacity: 180mAh
Charging Voltage: DC 5V
Typical Charge Time: 1–2 hours

Do not use fast-charging adapters above 5V.

3. Powering On and Off

To Turn On:

Press and hold the Power Button for approximately 2 seconds.
The screen will light up and the camera will enter Photo Mode by default.

To Turn Off:

Press and hold the Power Button again for 2 seconds until the screen turns off.

4. Taking Photos

Photo Mode is the default mode when powering on.

To Capture a Photo:

1. Ensure the camera is in Photo Mode.
2. Frame your shot using the LCD screen.
3. Press the Power Button once to capture.
4. The image will save automatically to the memory card.

Using Retro Filters

To add a 90s-inspired aesthetic:

1. While in Photo Mode, press the “_” button.
2. Each press cycles through available filters.
3. Capture your photo with the selected filter applied.

5. Recording Video

The Micro Vibes Mini Camera supports Full HD recording.

To Record Video:

1. Press the “+” button to switch to Video Mode.
2. Press the Power Button once to begin recording.
3. Press the Power Button again to stop recording.

Video Specifications:

Resolution: 1920 × 1080 (Full HD)

Format: AVI

Frame Rate: 30 FPS

Videos are saved automatically to the memory card.

6. Playback Mode

You can review your photos and videos directly on the device.

To Enter Playback Mode:

1. Press the “+” button until Playback Mode appears.
2. Use “+” or “-” to scroll through saved files.
3. Press the Power Button to play a selected video.
4. Long press the “+” button to exit Playback Mode.

7. Flashlight Mode

The built-in flash can also function as a small flashlight.

- Slide the flash switch upward to turn on.
- Slide downward to turn off.

The flash may also activate automatically during video recording if enabled.

8. Resetting the Camera

If the camera becomes unresponsive:

1. Press and hold the “+” and “-” buttons simultaneously.
2. The device will perform a system reset.

Resetting will not delete saved photos or videos.
System settings may return to default.

9. Technical Specifications

Screen Size: 1.44 inch LCD
Photo Resolution: 3760 × 2128
Video Resolution: 1920 × 1080
Video Format: AVI
Frame Rate: 30 FPS
Image Format: JPG
Battery Capacity: 180mAh
Charging Voltage: DC 5V
Storage: TF (Micro SD) Card

10. Safety & Care

- Do not expose to extreme heat or moisture.
- Do not disassemble the device.
- Use only recommended charging cables and adapters.
- Avoid dropping or applying excessive force.
- Keep away from small children.

Micro Vibes — Relive the 90s. Capture the moment.